

Operating Instructions

SAFETY INSTRUCTIONS

To ensure your personal safety and to maximize the full operating potential of this product, read and follow these safety precautions:

ENVIRONMENT-DO NOT use the unit at places with high levels of dust, high temperature, or high humidity. Please use the unit in a place where it is not subjected to vibrations or shocks.

POWER- Please use correct power as required for this product.

READ INSTRUCTIONS Read all safety and operating instructions before this product is operated.

RETAIN INSTRUCTIONS Retain the safety and operating instructions for future reference.

FOLLOW INSTRUCTIONS Follow all operating and use instructions.

HEED WARNINGS All warnings must be adhered to.

CLEANING-DO NOT use aerosol cleaners. Use only a little alcohol or a damp cloth to clean the exterior housing.

WATER AND MOISTURE-DO NOT use this product near water.

POWER SOURCES- Operate this product from the type of power source indicated on the marking label. If you are not sure of the type of power available, consult Authorized EDGELIGHT Dealer.


OVERLOADING-DO NOT overload wall outlets and extension cords. Doing so can result in fire or electric shock.

OBJECT AND LIQUID ENTRY Never push objects of any kind into this product. Touching dangerous voltage points may cause a short resulting in fire or electric shock. Do not spill liquid of any kind on this product.

CONDENSATION Moisture will form in the operating section of the product causing performance to be impaired if it is brought from cool surroundings into a warmer environment. If you are moving the unit to a location with a warmer temperature, let the product stand for 1 to 2 hours in the new location before turning it back on.

Operating Instructions

SPECIFICATIONS

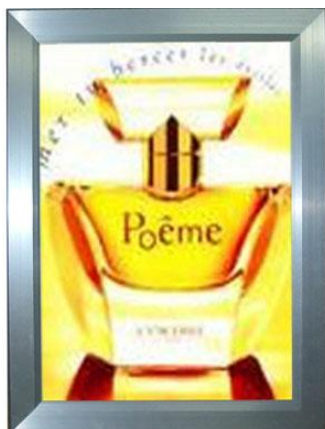

AF6 SERIES

Item		Frame size	Viewing size	Thickness	Film size	Packing	Volume	Gross weight	
		mm	mm	mm	mm	cm	m3	kg	
AF6	T5	3000x1500	2888x1388	37	2905*1399	306*9*156	0.43	60	
		2400x1200	2288x1088		2305*1099	246*9*126	0.28	40	
		1800x1200	1688x1088		1705*1099	186*9*126	0.21	32	
		B0	1505x1097		1393x985	1414*1000	162*9*121	0.18	24.3
	Life span		Above10000h						
AF6	LED	3000x1500	2888x1388	37	2905*1399	306*9*156	0.43	60	
		2400x1200	2288x1088		2305*1099	246*9*126	0.28	40	
		1800x1200	1684x1084		1705*1099	186*9*126	0.21	32	
		B0	1505x1080		1393x968	1414*1000	162*9*121	0.18	24.3
		B1	1091x787		979x675	1000*707	114*9*85	0.09	12.9
		B2	798x580		686x468	707*500	84*9*65	0.05	8.1
	Life span		Above50000h						

INSTALLATION

Graphic Replacement

1. Turn off power
2. Open the four upper covers
3. Remove front board and AD graphic
4. Change AD graphic
5. Place the front board
6. Close the four upper cover

Please see as follows:

 is a trademark of Shanghai Edge Light Industry Co., Ltd

<http://www.cnedgelight.com>

Operating Instructions




On the Wall

1. Measure installation dimension
2. Fix the light box on the wall by screws
 - A. If the wall is made of wood, plastic, aluminium and so on, you can directly fix the light box on the wall by self-tapping screws
 - B. If the wall is made of concrete, brick, marble and so on, you should firstly drill holes in the wall and screw expand screws, and then fix the light box.
3. Connect the power supplier



Operating Instructions

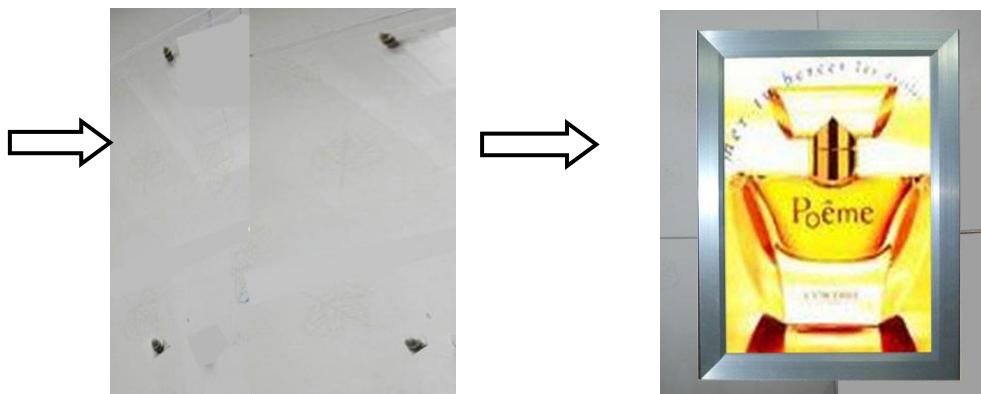

ACCESSORIES

Operating instruction x 1

Power supply (AC100-240V) x 1

(Various plugs are available for your needs, such as CE, UL, SAA, etc.)



CE



UL



SAA

NOTICE

* Pay more attention that Slim Light Box not to be crashed. While transporting or working, keep sharp edge or instrument away from Slim Light Box. Use soft & wet textile to clean front board to avoid being scratched. Make sure to use right voltage.

*Specifications and design subject to possible modifications without notice, due to improvements

PLS download the more detailed user manual from the following website:

<http://www.cnedgelight.com/image/AF6 Series.pdf>



Printed in China

EdgeLight®

EdgeLight®



EdgeLight®

EdgeLight®

1.

EdgeLight®

EdgeLight®

EdgeLight®

EdgeLight®